



# **VaxALPR On-Camera Software**

## ***Software Setup and i-PRO Configuration Main Manual***

**Version 1.3  
July 2024**

## Contents

1.	Introduction .....	4
2.	Requirements for License Plate Images .....	4
3.	Camera Requirements.....	5
3.1	Frame Rate – does not need to be set for VaxALPR On-Camera .....	6
3.2	Shutter Speed.....	6
3.3	Resolution and Lens Focal Length .....	7
3.3.1	Resolution - does not need to be set here for VaxALPR On-Camera.....	7
3.3.2	Focal length .....	7
3.3.3	Infrared illumination .....	8
4.	Other requirements .....	8
4.1	Camera Orientation.....	8
4.2	Distance.....	9
5.	Camera Setup and configuration for License Plate Recognition.....	11
5.1	Setting up the i-PRO Camera.....	11
5.1.1	Set the date and time of the camera .....	11
5.1.2	IP Configuration.....	11
5.1.3	Shutter speed and other important image settings.....	11
5.1.4	Important camera settings.....	12
5.1.5	SD Card .....	12
6.	Installing and licensing VaxALPR On-Camera.....	13
6.1	Installing the software.....	13
6.2	Upload the license key .....	15
6.3	Reinstalling or upgrading the software .....	17
7.	Main Menu Options .....	18
7.1	Plates .....	19
7.2	Settings – Configuring VaxALPR On-Camera .....	22
7.2.1	Country options.....	22
7.2.2	Extended Analytics .....	23
7.2.3	Plate.....	24
7.2.4	Environment.....	25
7.2.5	OCR.....	27
7.2.6	Reporting.....	27

7.2.7	Log Level .....	28
7.3	Region of Interest .....	28
7.4	Reports .....	31
7.4.1	Helix .....	31
7.4.2	JSON .....	32
7.4.3	Overlay .....	32
7.4.4	Camera action on alarm .....	33
7.4.5	XML.....	34
7.4.6	ONVIF .....	35
7.4.7	Genetec .....	35
7.4.8	Network Optix .....	35
7.4.9	Test Plate .....	36
7.4.10	Save all Reporting Options .....	36
7.5	Database.....	37
7.6	Log file .....	40
7.7	Upload Config.....	40
7.8	Download Config .....	40
8.	Sending data to Milestone .....	41
9.	Troubleshooting .....	43
9.1	The VaxALPR On-Camera software starts and then stops suddenly.....	43
9.2	The VaxALPR On-Camera license is valid but a 'Check license' message appears.....	43
9.3	The VaxALPR On-Camera software is running but not reading plates.....	43
9.4	Examples of incorrect camera setup.....	44
9.5	JSON or TCP setup but no plates being received .....	46
9.6	Licensing Error -78.....	46
9.7	Licensing Error -64.....	46
10.	Dynamic Text Replacement Reserved Words .....	47
10.1	Note on UTC time format:.....	49

## 1. Introduction

This guide has been designed for those responsible for setting up and configuring the i-PRO camera and the VaxALPR On-Camera software.

The VaxALPR On-Camera software is a real-time solution for Automatic License Plate Recognition (ALPR) that runs embedded on the i-PRO camera.


## 2. Requirements for License Plate Images

LPR (License Plate Recognition) is an image processing technology used to identify vehicles by their license plates. It is also known as ALPR (Automatic License Plate Recognition) and ANPR (Automatic Number Plate Recognition) among other names.

The following examples show two images of how license plates should be seen in both daytime and night-time conditions:



Ideal daytime license plate image

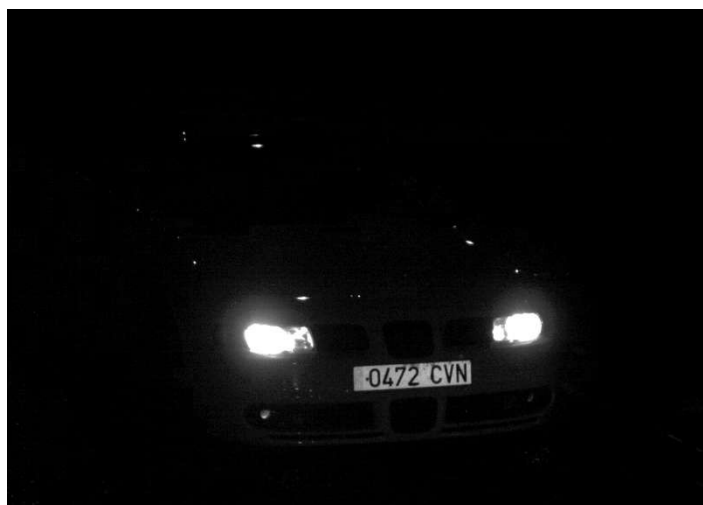

Ideal night-time license plate image

However, recognizing the license plate is more challenging if the images have any of the following characteristics or artifacts:

- Overexposed
- Blurred
- Distorted
- Unevenly lit
- Low contrast
- Bad weather conditions



Undesirable license plate images

The less clear that the plate images are, then the more likely it is that ALPR software will report then incorrectly. Garbage In → Garbage Out.

As a general guide, if a human has difficulty reading a plate, then so will an intelligent ALPR camera!

It is recommended that the images captured by the ALPR cameras be more like the first two examples shown above.

### 3. Camera Requirements

An intelligent ALPR camera is a specialized CCTV camera that has in-built software to identify license plates on still or moving vehicles. It is recommended that you use a i-PRO Camera with the correct processor for the installation and solution requirements. VaxALPR is available for WV-S and WV-X models which SoC is CV25m, CV22 and CV52.

More details of each camera model.

<https://dev-partner-en.i-pro.com/space/TPFAQEN/701433474/Installation+conditions+for+applications>

Resolution 1280 x 720 or 1920 x 1080 are recommended.

For CV25m and CV22, resolution must be under 1280x720 when MMC is enabled.

### 3.1 Frame Rate – does not need to be set for VaxALPR On-Camera

The frame rate, also known as frames per second (FPS), is the number of frames or images that the camera can capture per second. For example, 30 fps means the camera captured 30 frames in a single second of video.

When using the i-PRO camera to send a video stream **to a PC** running Vaxtor ALPR or if using the camera to send video to a VMS such as Video Insight, Milestone or Genetec – then the frame rate should be specified as shown below.

**However – if you are running the i-PRO On-Camera VaxALPR App then there is no need to set the frame rate. The App will set this internally.**

*If you need to set the frame rate for your own use see below:*

❖ *Lower frame rates:*

- *Can result in choppy or broken movement*
- *Are ideal for locations with no fast-moving objects*
- *Are less intense for the camera and network (bandwidth)*
- *Result in less frames and smaller video files*

❖ *Higher frame rates*

- *Produce smoother movement*
- *Are ideal for locations with faster traffic*
- *Are more intense for the camera and network (bandwidth)*
- *Result in more frames and larger video files, which may result in the need for more storage capacity.*

*For ALPR cameras, the following frame rates are recommended:*

- **Barrier or Gate** → *Frame rate > 5 fps*
- **Road or Street** → *Frame rate ≥ 15 fps*
- **Fast Urban** → *Frame rate ≥ 20 fps*
- **Motorways** → *Frame rate ≥ 25 fps*

### 3.2 Shutter Speed

Shutter speed, also known as the “exposure time”, is the length of time a camera shutter is open for in order to expose light onto the camera sensor. The shutter speed is measured in seconds, or fractions of a second. The bigger the denominator, the faster the speed. For example, 1/250<sup>th</sup> means one two-hundred-and-fiftieth of a second or four milliseconds.  
*(1 second = 1000 milliseconds)*

The following shutter speeds are recommended:

- **Barrier or Gate** → Minimum exposure time **1/250<sup>th</sup> sec** (4 milliseconds)
- **Road or Street** → Minimum exposure time **1/500<sup>th</sup> sec** (2 milliseconds)
- **Fast Urban** → Minimum exposure time **1/1000<sup>th</sup> sec** (1 millisecond)
- **Motorways** → Minimum exposure time **1/1000<sup>th</sup> sec** (1 millisecond)

### 3.3 Resolution and Lens Focal Length

#### 3.3.1 Resolution - does not need to be set here for VaxALPR On-Camera

The resolution of the camera determines the amount of detail that can be captured. The smaller the object detail, the higher the resolution that is required.

When using the i-PRO camera to send a video stream **to a PC** running Vaxtor ALPR or if using the camera to send video to a VMS such as Video Insight, Milestone or Genetec – then the resolution should be set as shown below.

1. *The resolution (pixel size) of the camera sensor. This sensor (normally CMOS) where the light eventually falls and a typical IP camera has a sensor resolution of 2 or 4 Megapixels.*
2. *The resolution of the camera's electronics. Some cameras are capable of resolutions in excess of 1920 x 1080 – but may be set to a lower resolution if not needed.*
3. *The quality and focal length of the lens. The quality of the optics can play a part in challenging circumstances. The focal length (zoom factor) determines the field of view that can be seen.*
4. *The quality of the images can be influenced by factors such as the type of lighting used.*

*Depending on where the ALPR camera will be deployed, the following resolutions are recommended for a single lane:*

- **Barrier or Gate** → Resolution **800 x 600 pixels** or higher
- **Roadside Deployment** → Resolution **1280 x 720 pixels** or higher

#### 3.3.2 Focal length

The focal length of the lens determines how “zoomed in” the image is. It is usually expressed in millimetres (e.g., 6 mm, 25 mm, or 50 mm). The focal length tells us the angle of view (how much of the scene will be captured) and the magnification (how large individual elements will be). The longer the focal length, the narrower the angle of view and the higher the magnification. The shorter the focal length, the wider the angle of view and the lower the magnification.

In the case of zoom lenses, both the minimum and maximum focal lengths are stated, for example 10–40 mm.

**IMPORTANT:** The lens should be **IR corrected** to avoid out of focus images.

### 3.3.3 Infrared illumination

Infrared (or IR) illuminators are designed to provide additional illumination that the camera can see but humans normally cannot. In low light conditions, an IR illuminator is used as a spotlight to facilitate 24-hour recognition. It can penetrate darkness and to a lesser extent fog, rain and snow and it eliminates the inconsistency of ambient light.

Infrared illuminators add light across the camera's field of view to produce the desired image quality, lighting up the area and reflecting the plate.

For ALPR, it is recommended that the camera **always** has an **infrared illuminator**. This can be built into the camera or added as an external unit providing that it is placed very close to the camera lens. *(The angle made between the light leaving the IR light source and that of the reflected light returning to the camera lens should be 5° or less.)*

## 4. Other requirements

The positioning of the camera is key to achieving maximum OCR accuracy.


### 4.1 Camera Orientation

The image orientation is a key factor in achieving the maximum OCR efficiency. It is recommended that you stay within the following thresholds:

**Pitch (Vertical) should be:** < 30°

**Roll (Slope) should be:** < 25°

**Yaw (Horizontal) should be:** < 25°

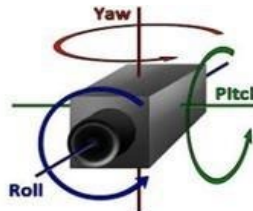





Examples of different camera orientations

*Accuracy will decrease significantly if these guidelines are not adhered to.*


## 4.2 Distance

The objective of an ALPR system is to capture an image with a good readable plate. In order to achieve this the characters on the plate should have a height between 20 and 30 pixels for larger plate formats (e.g. EU 50cm plates) and about 25-35 pixels for USA-style plates which are physically smaller and have a narrow character stroke width in many states.

Certain Middle East and Arabic plates are smaller still and will need an even greater character pixel height of say 30-40 pixels. For example, in Abu Dhabi the small characters next to or above the main characters are only 3cm high and may require a much higher camera resolution.

The camera should be setup so that the combination of the **distance**, the **lens's focal length** and the **camera's resolution** provide an image that can be accurately analysed by the OCR.

More details on combining these settings are provided later in this guide.

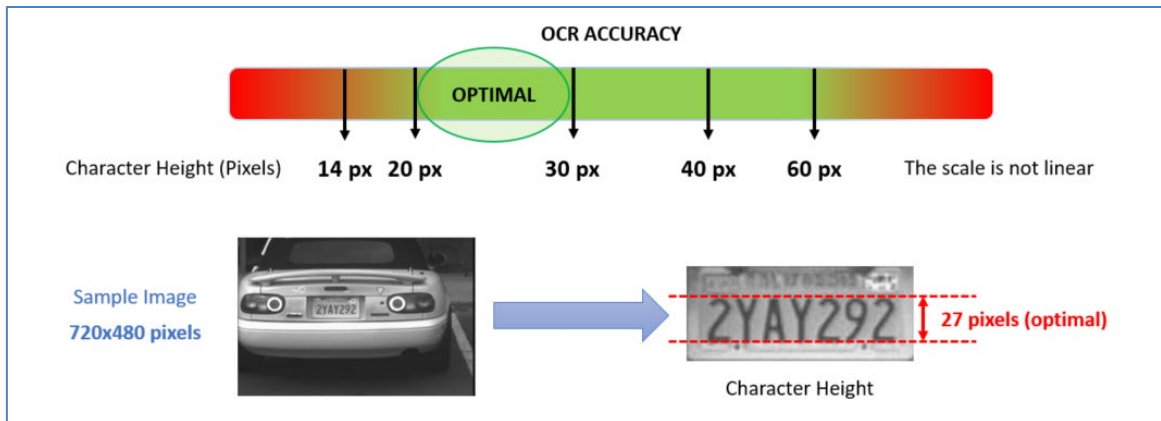

Optimal character height in pixels

*Note that for small plates such as most Arabic plates - or plates with additional small characters such as Costa Rica, – then a minimum character pixel height of 30 pixels is recommended.*

## 5. Camera Setup and configuration for License Plate Recognition

In this section, we describe how to:

- Set up the i-PRO Camera for optimum image quality
- Configure the VaxALPR On-Camera software

### 5.1 Setting up the i-PRO Camera

Once the i-PRO camera has been installed it must be set up and configured. Use a web browser to logon to the camera using its IP address. (*refer to the i-PRO documentation for the default IP address and username/password*)

Once logged on, check for the latest firmware update from i-PRO.

Check for the latest firmware

Select the Maintenance tab / Upgrade. On the right you will see details of the current firmware. To Upgrade select “Choose file”.

Contact i-PRO for further details on upgrading

#### 5.1.1 Set the date and time of the camera

To set the date & time select **Basic** setup. It is recommended that you use an NTP Time Server.

#### 5.1.2 IP Configuration

Before installing the software, please configure the IP and DNS settings as required ensuring routes are available for the reporting options. To do this go to the main i-PRO **Network** menu. A recommended option is Google’s is 8.8.8.8 with a secondary server of 8.8.4.4.

These are free Google DNS servers which will map any domain names needed to the correct IP address.

#### 5.1.3 Shutter speed and other important image settings

Set the shutter speed as needed noting that different shutter speeds should be setup depending on where the camera is to be placed:

- **Barrier or Gate** → Minimum exposure time **1/250<sup>th</sup> sec** (4 milliseconds)
- **Road or Street** → Minimum exposure time **1/500<sup>th</sup> sec** (2 milliseconds)
- **Fast Urban** → Minimum exposure time **1/1000<sup>th</sup> sec** (1 millisecond)
- **Motorways** → Minimum exposure time **1/1000<sup>th</sup> sec** (1 millisecond)

To set the **shutter speed (minimum exposure time)** and other important settings in the i-PRO camera It is recommended that you park a vehicle or place a license plate in the region of interest.

#### 5.1.4 Important camera settings

Select **Image/Audio** and **Image quality** to adjust the main image settings

Refer to i-PRO's documentation for further details


#### 5.1.5 SD Card

It is recommended that you install an SD card in your i-PRO camera ( see i-PRO's documentation for details of how to do this.)


***The X-Series(CV22) does not support EXT format, so SD cards cannot be used.***

The card should be a 32GB or 64GB and is used by the ALPR software to store plate patch images and to cache reads prior to transmission. If there is a communication problem then the ALPR software will attempt to retransmit all unsent plate reads.

Once installed, enable the **SD card**, select **Ext software mode** and **ext(ext4)** for SD Memory Card File System Format as follows:

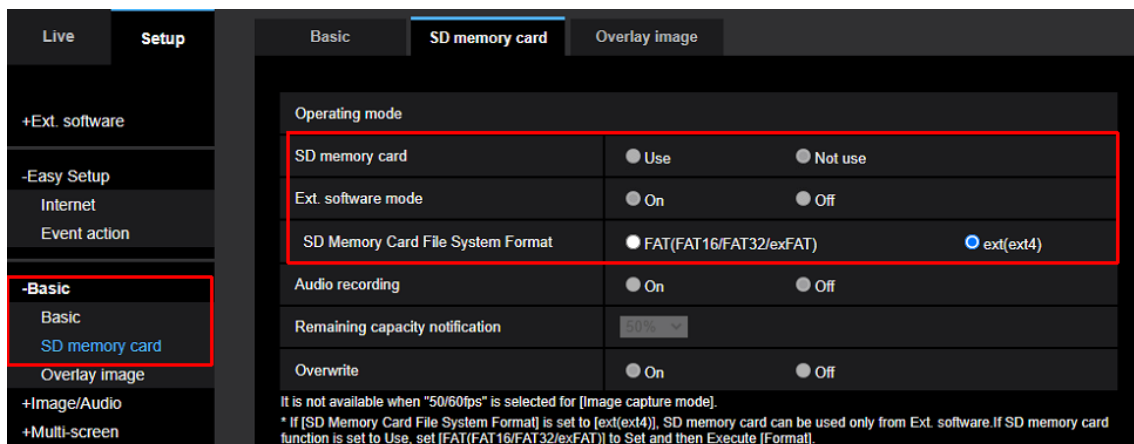

And then, **Execute Format**

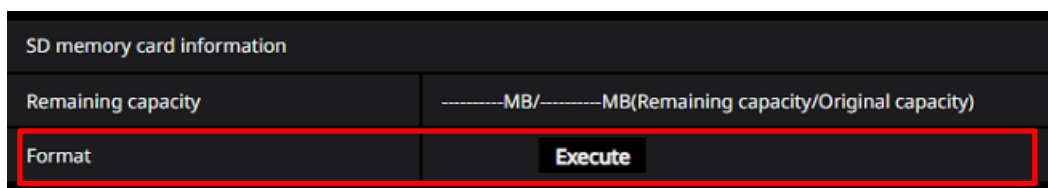


## 6. Installing and licensing VaxALPR On-Camera

Once the i-PRO camera is installed and setup, we need to install and configure the VaxALPR On-Camera software. The following steps are required:

1. Install the ALPR software
2. Upload the license key
3. Start the software
4. Configure the software
5. Confirm the software is working correctly and providing the expected results


### 6.1 Installing the software

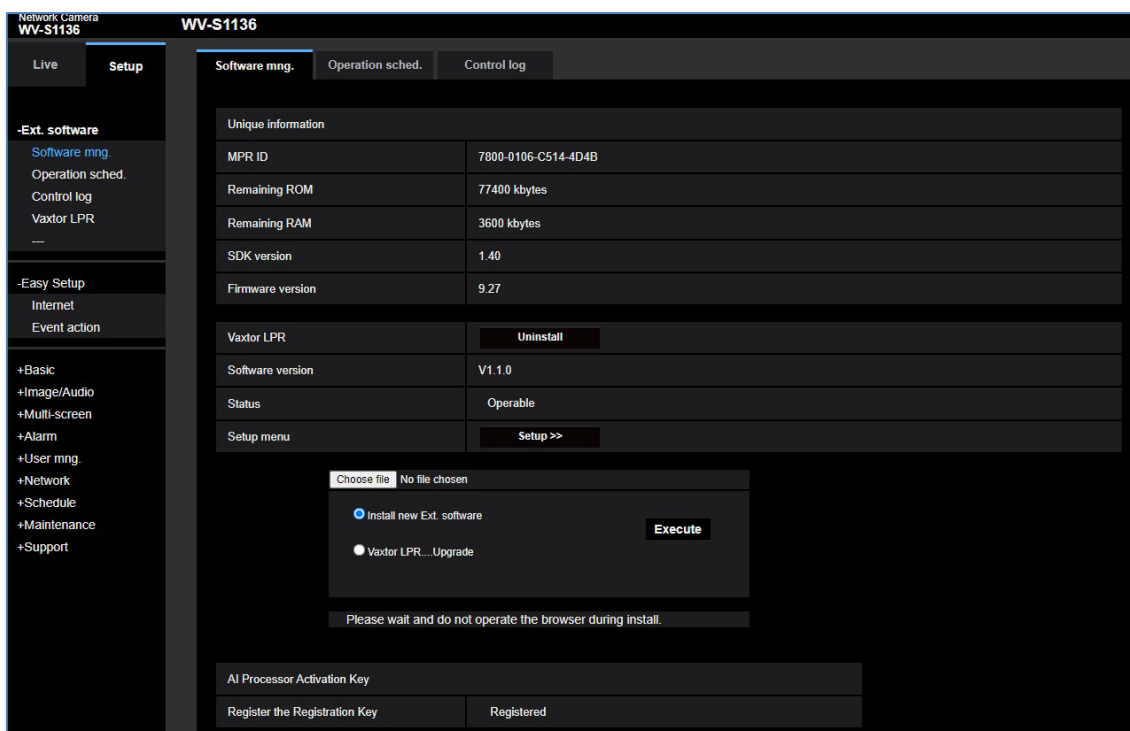


To install the VaxALPR On-Camera software, do the following:

1. Select the **Setup** Tab
2. Select **Software mng.** (Manager)


For CV25 camera models, **RAM capacity expansion mode** must be **On**.

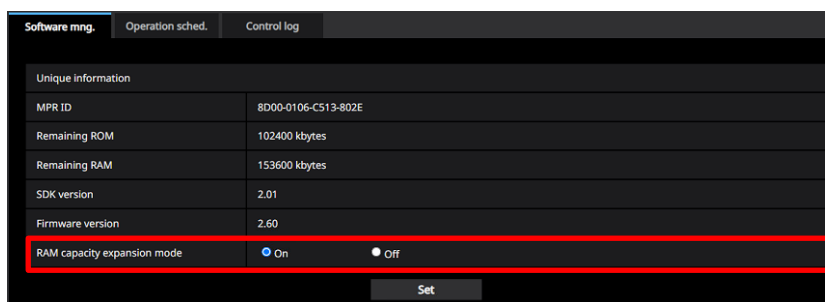


3. Select **'Install new Ext. software'**
4. Select **Choose file** and browse to the latest software
5. The file will appear on the dialogue box:

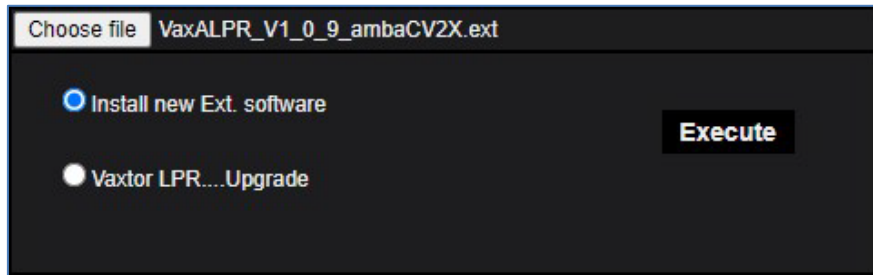

6. Select **Execute** to start the installation.
7. You must **Agree** to the Third-Party Terms and Conditions and then press **OK** to start the installation.

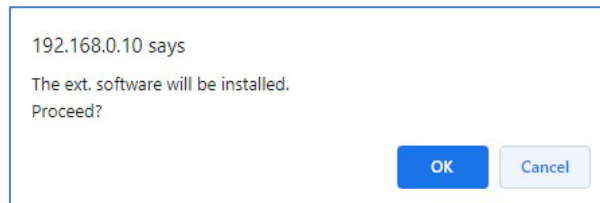

8. Confirm the installation. You must wait until the software has been completely installed:

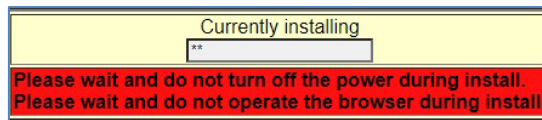

9. Once installed the software will appear on the main screen  
***For CV25 camera models with the firmware version 2.60 or later, please restart camera to get enough RAM.***


Vaxtor LPR MMC	<b>Uninstall</b>
Software version	V1.3.29
Status	Operable
Setup menu	<b>Setup &gt;&gt;</b>

## 6.2 Upload the license key

Select **Setup** to open a new browser page to license and then configure the software:

Vaxtor LPR	<b>Uninstall</b>
Software version	V1.1.0
Status	Operable
Setup menu	<b>Setup &gt;&gt;</b>


The main Setup screen will appear:

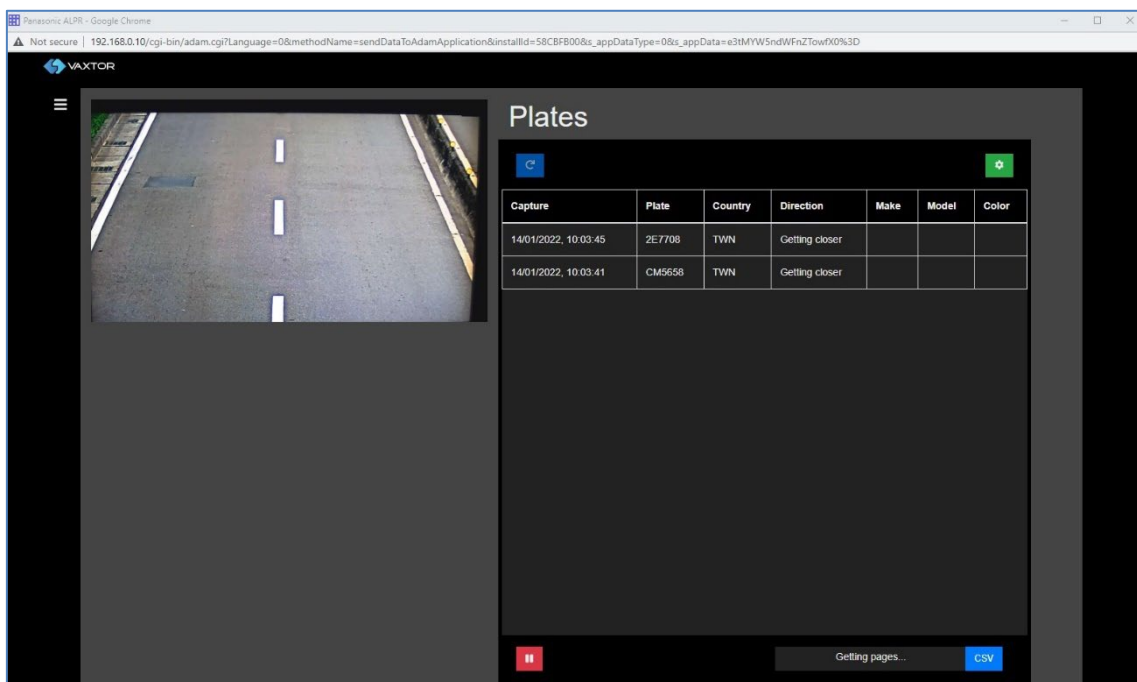


The screenshot shows the Vaxtor ALPR software interface. On the left is a camera feed showing a road with white dashed lines. On the right is a 'Plates' section with a table of detected license plates. The table has columns for Capture, Plate, Country, Direction, Make, Model, and Color. Two entries are visible in the table.

Capture	Plate	Country	Direction	Make	Model	Color
14/01/2022, 10:03:45	2E7708	TWN	Getting closer			
14/01/2022, 10:03:41	CM5658	TWN	Getting closer			


Select the 3 bars ( top left) to open the Main Menu.

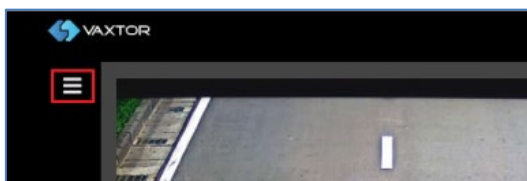

The Main Menu appears:

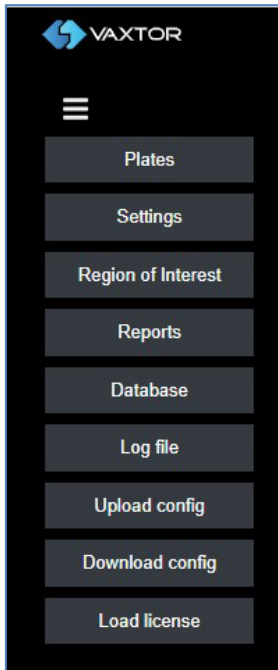

Select Load License to open the Licensing Screen:

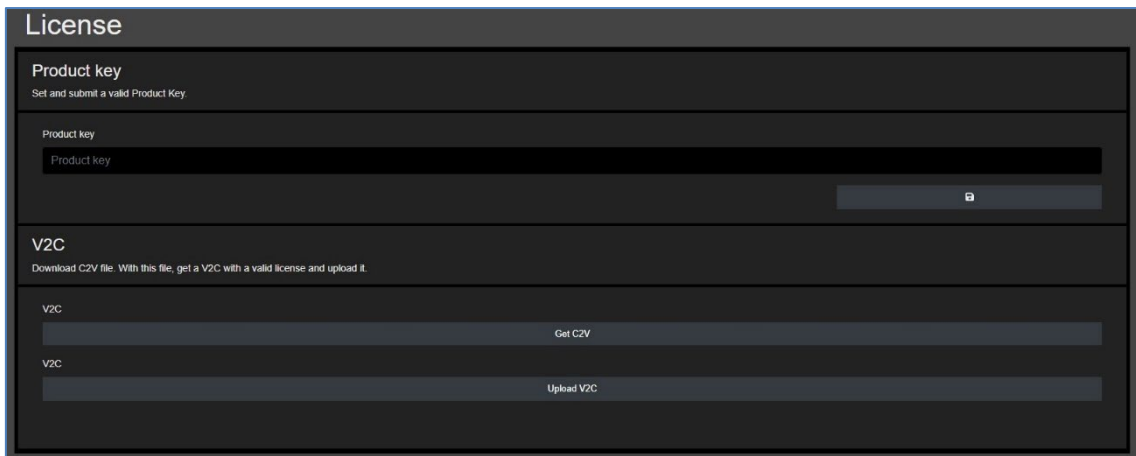

The Vaxtor On-Camera software for i-PRO uses the Sentinel software licensing system from Thales. Contact your supplier or Vaxtor in order to purchase a software license. You will be sent a Product Key which looks something like: a13c5eb4-a962-406c-99e0-93f8dfd9ae7



**Licenses can be redeemed in 2 ways: -**

1. **Online** (Camera must have access to <https://licensing.vaxtor.com>)
  - a. Type or copy in the provided **Product Key**
  - b. Select the Disk icon to submit the Product Key
  
2. **Offline**
  - a. Select **Get C2V**. This saves a c2v file to your computer's Download Directory.
  - b. Upload and generate the V2C at <https://licensing.vaxtor.com> using your product key to login
  - c. Select **Upload V2C** and browse to the V2C file to upload it


Online licensing is preferable where possible as the license becomes permanent as does not have to be reinstalled following a App software update.

Once licensed, return to the main menu.

### 6.3 Reinstalling or upgrading the software


If you need to re-install the APP due to a new release being available then use the **Download config** function (see later) to save your OCR settings.

Next install the new software using the **Upgrade** option in the same menu as you used to install the original App:

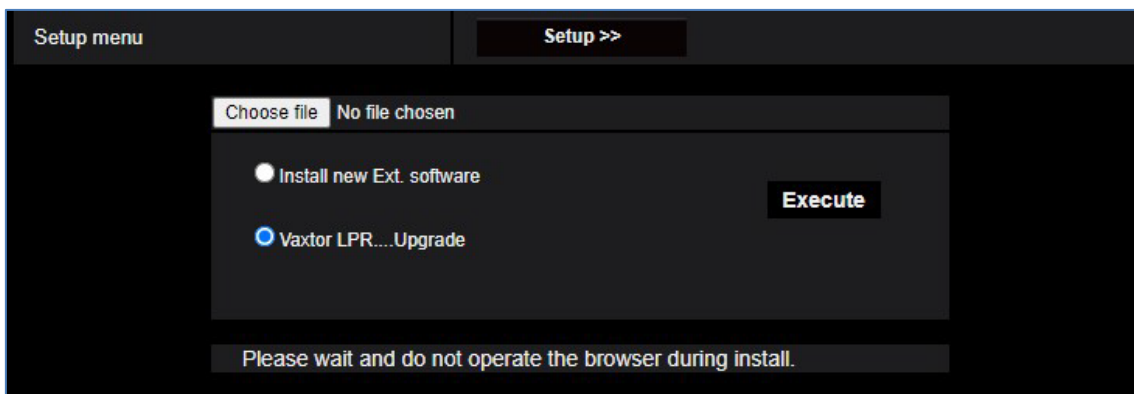

The confirmation messages appear as before.

## 7. Main Menu Options

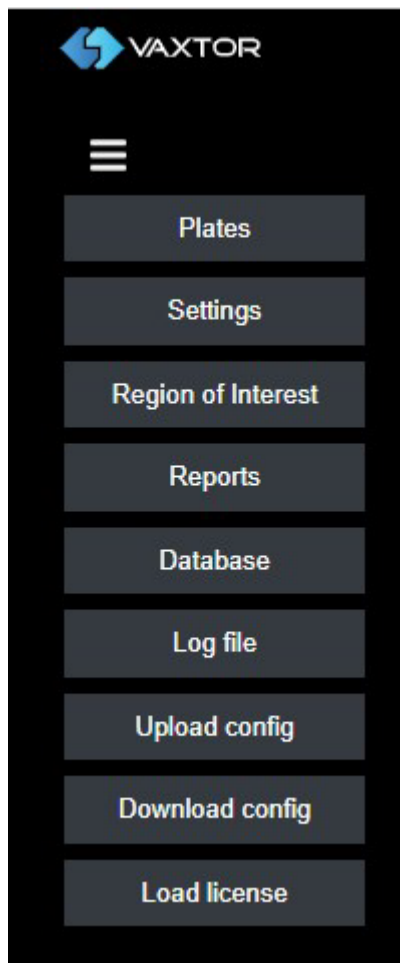


The Main Menu is always accessed by clicking on the three bars at the top of the menu. From here you can configure the application including the OCR settings, regions of interest, reporting options etc.

<b>Plates</b>	Display a short list of plates recently read
<b>Settings</b>	Configure the OCR parameters
<b>Region of Interest</b>	Define one or more regions of interest
<b>Reports</b>	Configure reporting options to send reads to 3 <sup>rd</sup> party software
<b>Database</b>	Display a more comprehensive list of stored plate reads
<b>Log file</b>	Display a log file of application activity, useful when debugging
<b>Upload config</b>	Load an xml configuration file
<b>Download config</b>	Save the current configuration file in xml format
<b>Load license</b>	Install a software license

## 7.1 Plates


The most recent plate reads are stored in the camera's internal memory and are displayed when the Plates menu is selected. The number of plates stored

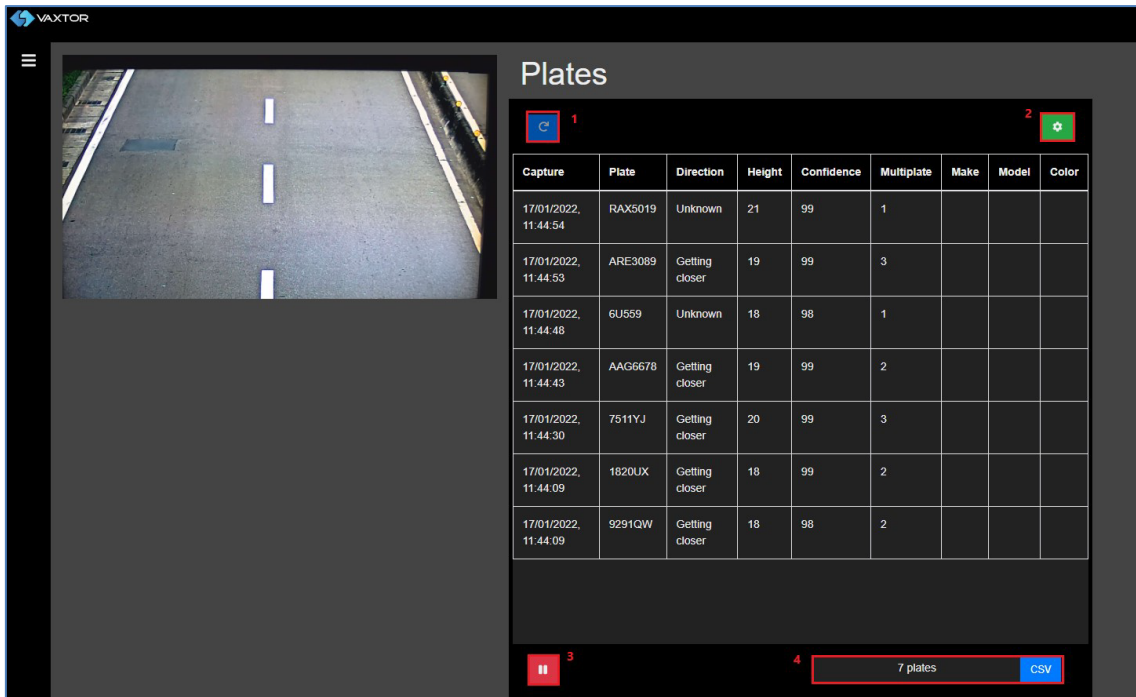

Capture	Plate	Direction	Height	Confidence	Multiplate	Make	Model	Color
17/01/2022, 11:44:54	RAX5019	Unknown	21	99	1			
17/01/2022, 11:44:53	ARE3089	Getting closer	19	99	3			
17/01/2022, 11:44:48	6U559	Unknown	18	98	1			
17/01/2022, 11:44:43	AAG6678	Getting closer	19	99	2			
17/01/2022, 11:44:30	7511YJ	Getting closer	20	99	3			
17/01/2022, 11:44:09	1820UX	Getting closer	18	99	2			
17/01/2022, 11:44:09	9291QW	Getting closer	18	98	2			


1. Refresh: Select to refresh the current view
2. Config Columns: Select to define the displayed columns
3. Play / Pause: Select Play to continuously refresh the current view
4. Export: Select to export the list of detected plates in a csv format

Click on a plate to display details of the read including the character height, multiplate reads etc. This is useful when checking that you have set the min and max plate heights up correctly as you can see some of the variances in captured plates.

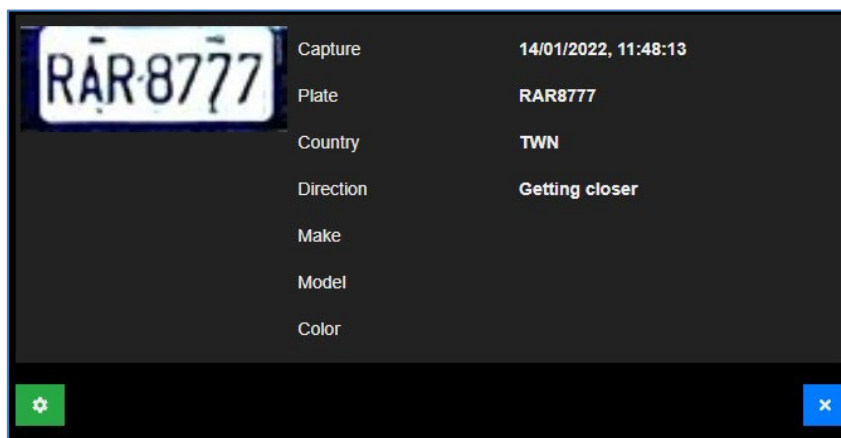


Capture	14/01/2022, 11:48:13
Plate	RAR8777
Country	TWN
Direction	Getting closer
Make	
Model	
Color	

Click on the green cog ( bottom left)  to configure what information to show here:

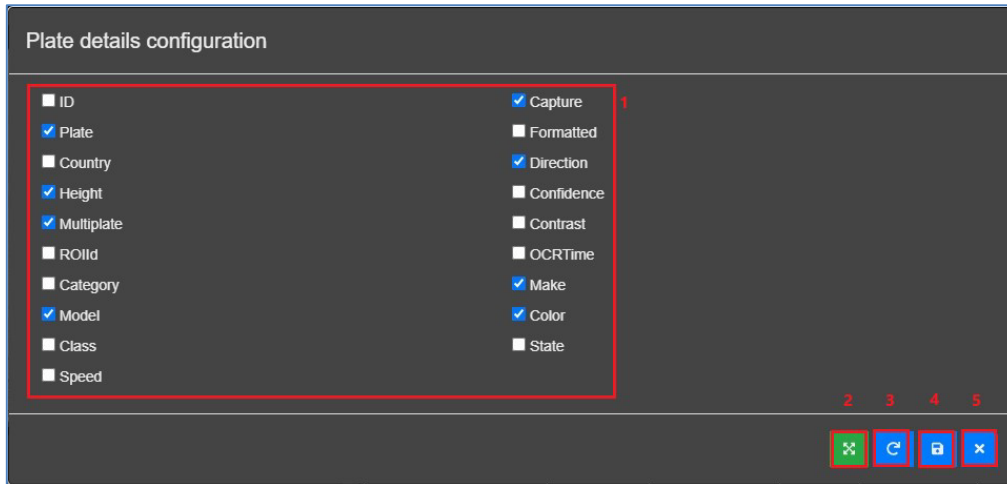


*Note that Make, Model and Color and Vehicle Class are only available if you have bought the MMC or VClass version from Vaxtor. Contact Vaxtor for further details.*

1. This area is where you can control which fields are displayed when you click on a plate
2. Selecting this icon enables ALL the fields
3. This resets the fields displayed to their default settings
4. Select the disk icon to save your current display settings
5. Select the X icon to close the menu and return to the main plates screen:

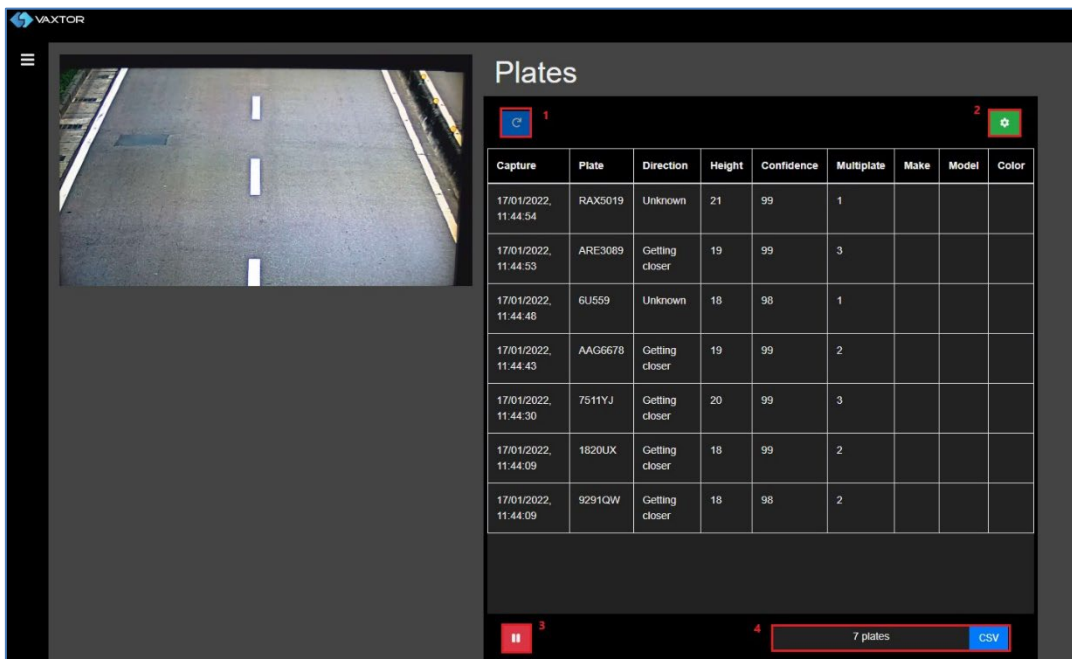

Select the green cog top right to control what columns are displayed on the Plates screen:

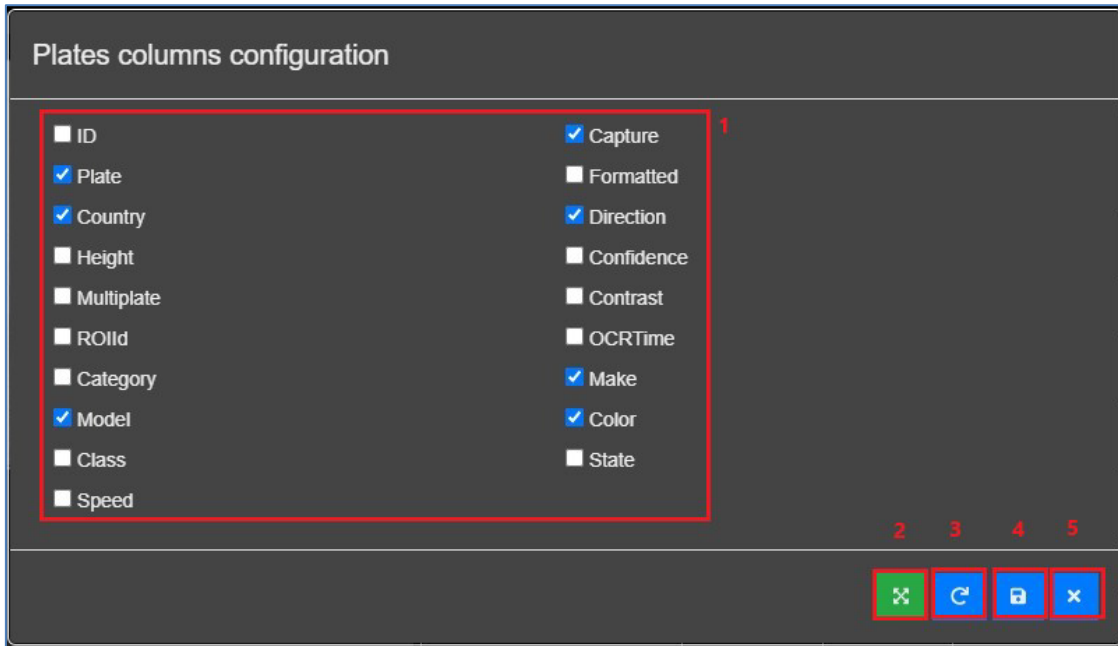

1. This area is where you can control which fields are displayed when you click on a plate
2. Selecting this icon enables ALL the fields
3. This resets the fields displayed to their default settings
4. Select the disk icon to save your current display settings
5. Select the X icon to close the menu and return to the main plates screen

Select the CSV icon on the main plates screen to save a .csv file to your PC.



The file will be saved in your downloads folder and appears as follows:

A1	category;char_height;class;color;confidence;contrast;country;date;direction;formatted;id;make;model;multiplate;plate_number;processing_time;roi_id;speed;state																											
	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z		
1	category;char_height;class;color;confidence;contrast;country;date;direction;formatted;id;make;model;multiplate;plate_number;processing_time;roi_id;speed;state																											
2	;19;;99;-1;TWN;2022-01-14T1247116510100;1;8281PW;bb5973be-33f4-4a43-aba8-4dc48cbe2919;;3;8281PW;151;-1;-1;																											
3	;19;;99;-1;TWN;2022-01-14T124720510100;1;AJG0126;5e231e05-291d-4f5d-b51b-e4ef7ef285c9;;2;AJG0126;178;-1;-1;																											
4	;17;;99;-1;TWN;2022-01-14T1247259520100;1;0232J8;52b8d55d-5438-4515-8683-ea17a01e05b7;;2;0232J8;123;-1;-1;																											
5	;18;;99;-1;TWN;2022-01-14T1247339190100;1;AAE0695;0cf072fc-d36e-4945-b994-b0ad9bbe18ea;;2;AAE0695;159;-1;-1;																											
6																												

The first row contains the field headers.

There is a Pause / Play button for preventing any new plates being added to the list for a short period. Pressing Play once more catches up any cached reads.

*Note that you can get a more comprehensive view of the vehicle from the Database option described further in this manual.*

## 7.2 Settings – Configuring VaxALPR On-Camera

### *VaxALPR On-Camera user interface*

Select the **Settings** button to display the LPR Configuration window. This is a scrollable window comprising several sections allowing you to configure and tune the main recognition parameters.


Sections include:

<b>Country options</b>	Define country of use and grammar rules
<b>Extended Analytics</b>	Enable or Disable MMC analysis
<b>Plate</b>	Define the types of plate seen and set the resolution
<b>Environment</b>	Specify how long to spend analysing each plate etc.
<b>OCR</b>	Filter on confidence and set engine OCR level
<b>Reporting</b>	Activate re-sending option for bad communication sites
<b>Log level</b>	System log options

### 7.2.1 Country options



#### **Countries (1-6)**

At least one country must be selected and up to ten countries may be included. Select a country from the drop-down list and click the  button. The country will be added to the list. Repeat to add multiple countries and these will be added to the bottom of the list. Make sure that the list is ordered so that those countries with the higher probability of occurrence appear first.

#### **Required State (1-6)**


If one of selected countries is *United States*, a main state must be selected from the drop-down menu. A total of five states can be added – again in likely order of occurrence.

*Note that the same neural engine (used for matching character shapes) is used for all of the Americas, selecting the state simply loads the possible syntax (grammar) for those*

*states to help with the letter O and zero for example. Other states not in the list will still be recognized.*

### 7.2.2 Extended Analytics

When using Vaxtor LPR MMC app, Make, Model, Color and Vehicle Class are available.

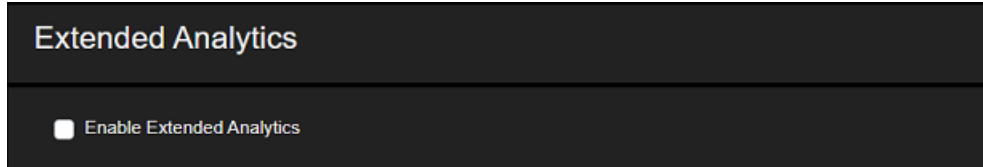

**Note:** When enable MMC, resolution must be under 1280x720 for CV25m and CV22 models.

### 7.2.3 Plate

#### Plates

- Enable database
- Enable blacklist
- Levenstein distance for blacklist

0
- Enable whitelist
- Levenstein distance for whitelist

0
- Plate mode

Plates in UTF8 ▼
- Resolution

1920x1080 ▼
- Minimum Character Height (14-70 pixels)

14
- Maximum Character Height (14-70 pixels)

70

#### Enable database

Select to enable the onboard recording of the Plate results

Note: an SD card is required regardless of this setting.

#### Resolution

Resolution

1280x720 (check overlays) ▼

1920x1080

1280x720 (check overlays)

640x360 (check overlays)

Select the desired **Resolution** from the drop-down list. Any changes will immediately be shown on the live display.

**NOTE:** when the camera is setup to read plates in a single lane then a resolution of 1280x960 is recommended. When the camera is setup to read plates in wide or multiple lanes, a resolution of 1600x1200 or 1920x1080 is recommended.

Note that some of the available resolutions are followed by the words: 'check overlays'



This varies from model to model and is dependent on firmware releases. If the words appear then you should check if you have selected a text overlay or watermark to be written into the saved image files. ( See REPORTS, Overlay later in this manual).

If so then there is a danger of the OCR software reading this overlay text and trying to interpret it as a license plate. You can prevent the software from doing this by creating a suitable 'Region of Interest' or ROI. Multiple areas of the image can be included or excluded from the recognition process. See **Region of Interest** section later.

#### **Minimum Character Height (14-70 pixels)**

This is the minimum height that a license plate's characters should be before being read. If the camera's lens (zoom) is setup correctly then the plate characters should be about 20-30 pixels high in the area of the field of view where they should be read. Set this too small and the tiny plates will cause misreads.

*Note that for small plates such as most Arabic plates – or plates with additional small characters such as Costa Rica, – then a minimum character pixel height of 30 pixels is recommended.*


#### **Maximum Character Height (14-70 pixels)**

Set the maximum height of the plate's characters in pixels.

#### **NOTE:**

**The recommended difference between the min and max heights is about 10 pixels.**

### **7.2.4 Environment**

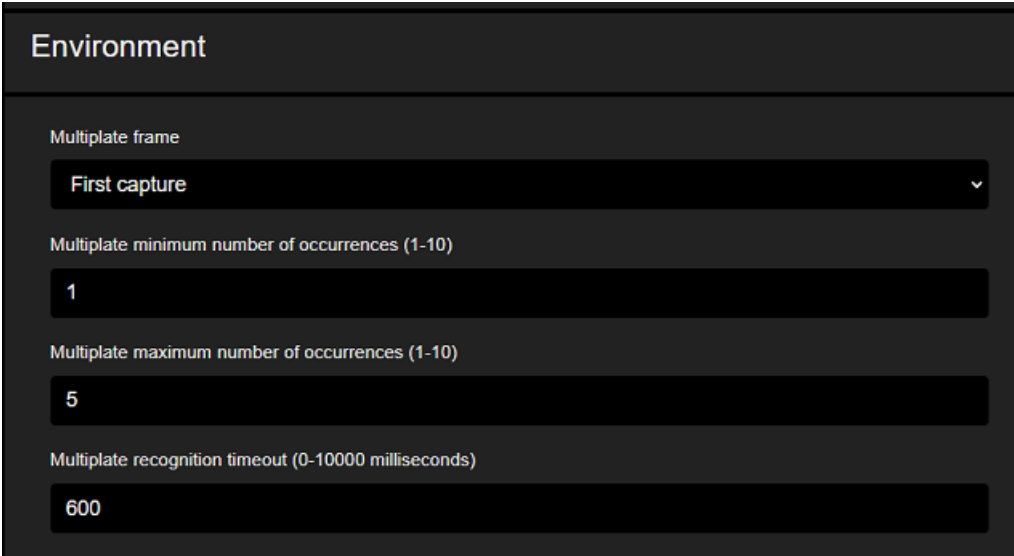

**Environment**

Multiplate frame  
First capture

Multiplate minimum number of occurrences (1-10)  
1

Multiplate maximum number of occurrences (1-10)  
5

Multiplate recognition timeout (0-10000 milliseconds)  
600

## **Multiplate Frame**

Select which plate image should be saved from the drop-down list:

- *First capture.*
- *Middle capture.*
- *Last capture*

A plate is normally read several times as it passes through the camera's field of view. You may want to use the largest (Last) image for oncoming traffic & the First image for vehicles moving away from the camera.

## **Multiplate minimum number of occurrences (1-10)**

Set the minimum number of times that a plate should be read within the Timeout period to be considered a valid plate. Set this to 1 or 2 for most scenarios.

## **Multiplate maximum number of occurrences (1-10)**

Set the maximum number of times that a plate should be read before being reported (this may happen before the timeout). Set this to about 5 for most scenarios.

## **Multiplate recognition timeout (0-10000 milliseconds)**

Set the number of milliseconds that the engine should spend analysing a plate.

(1000 milliseconds = 1 second)

In free-flow mode the engine continuously analyses video frames and reads and reports plates. It makes a final decision on the plate read after an interval of time – the maximum recognition timeout period. There is a dedicated time counter for every plate which starts counting after the first read. When it reaches the preset timeout it stops, checks the number of samples read of the same plate and returns the “best” result.

If an instantaneous plate read is not needed, then set this timer to say 1500ms (1.5 seconds) so that the engine continues to look for the same plate to read again for as long as possible. Note that if a new plate is spotted, the old one will be reported and a new plate-trace started.

We call the number of times the same license plate has been read within the maximum recognition period the multiplate rate. Several reads of each plate are good and produce better results.

### 7.2.5 OCR

#### OCR

---

LPR complexity

Low

Dwelling timeout (seconds)

0

Same Plate Delay (seconds)

60

- Read away?
- Read closer?
- Read stopped?
- Read unknown direction?

#### LPR complexity

This is the complexity of the analytics to be applied during the ALPR Engine's stage of plate reading. Set this according to the OCR mode and type of traffic expected.

There are three possibilities:

- Low: Recommended for very high-speed traffic where the OCR needs to work faster and your preference is for plate detection over perfect recognition.
- Medium (Default): Recommended when the OCR mode is set to free-flow.
- High: Recommended when the OCR mode is set to signalled (triggered.)

NOTE: Higher complexities give more accurate reading but make the ALPR engine run slower.

### 7.2.6 Reporting

#### Reporting

---

- Retry notifications
- Low coverage mode
- Do image crop to 640x480

JPEG Quality (1 - 100)

80

Retry notification time (1 - 100 seconds)

1


### Retry notifications

Select this to retry the sending of any notifications if any fail, for example due to a comms problem.

### Retry notification time (1 – 100 seconds)

Select this to specify the retry period in seconds.

#### 7.2.7 Log Level

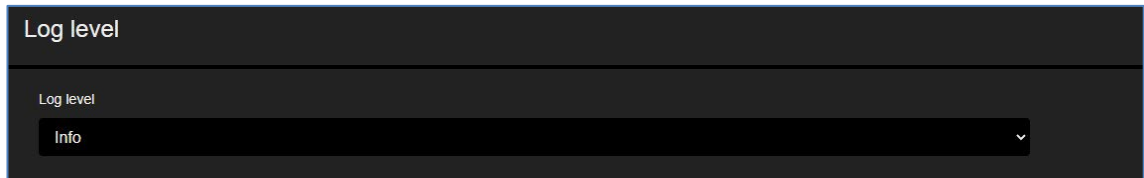

### Log Level

Select the required level of logging.

- Error
- Info
- Trace
- Debug

After configuring all of the OCR settings select the Disk icon ( bottom right) to save them to the camera.

The refresh symbol (bottom left) resets all the values to factory defaults.



Close the Settings window to return to the Main Menu.

## 7.3 Region of Interest

A Region of Interest (ROI), sometimes known as the Crop Zone, is used to define an area within the video frame where the OCR analytics takes place. The user can define a polygon and choose whether the area to look for plates in Inside or Outside this region. The user can then set multiple regions, i.e. multiple ROIs, in complex situations although this is rare.


Using an ROI can decrease OCR processing time and also reduce false positives.

So, if the camera is looking across a large stretch of road as in the example below, the ROI can be used to limit the OCR to an area of interest thus reducing the processor load.

If a plate-shaped house window or road sign for example is within the camera's field of view and keeps getting mistaken for a license plate, then these false positives can be eliminated by creating a crop zone to exclude this part of the image.

Each ROI must be given a unique numeric Identifier.

*Note that the whole license plate must be in or out the ROI to pass the test.*

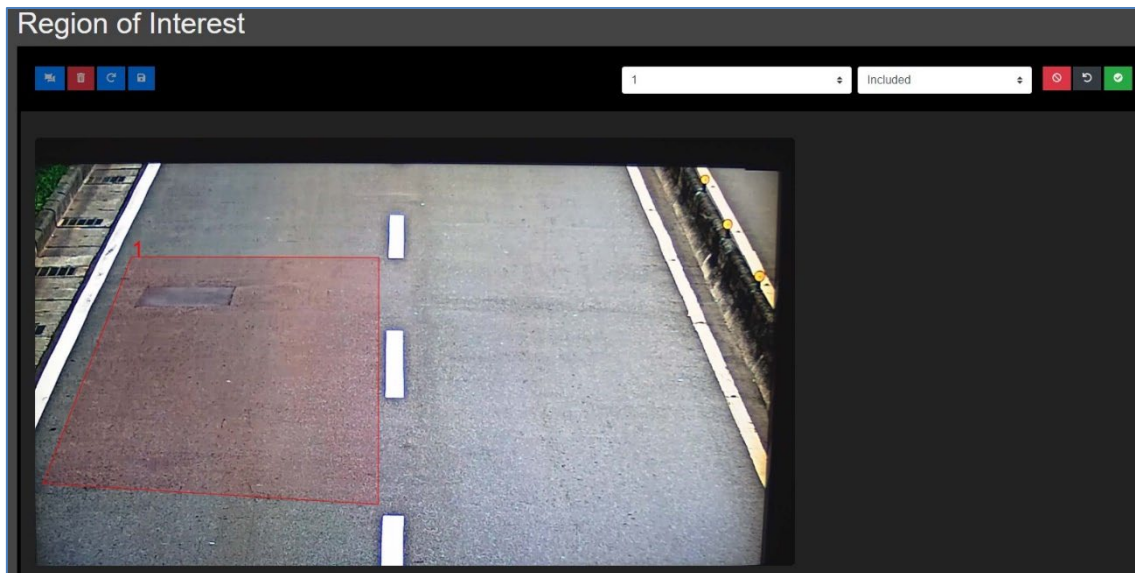


**IMPORTANT:** ROIs can be configured to either include the areas defined from the OCR – or exclude them. If multiple ROIs are added they must all be of the same type.



1. Add a new ROI: Select to add a new ROI. Use the mouse to define one or more complex shapes.
2. Remove all ROIs: Select to delete all ROIs
3. Reload ROIs: Select to reload all ROI's from the camera's memory
4. Submit ROI's: Select to save and submit ROI's to the camera memory
5. Select ROI ID: Select the ROI unique Identifier
6. Decide whether the area defines is to be included or excluded from the OCR
7. Cancel the ROI editing
8. Clear all the points defined on the current ROI
9. Confirm the ROI and save to the camera's memory

Once one or more ROIs have been defined, you can edit or delete each one individually:

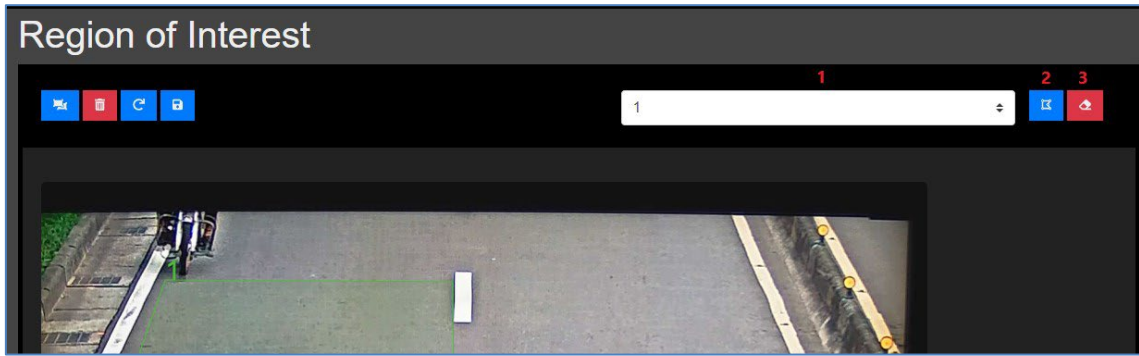


1. Select an ROI number to edit or remove
2. Click to edit the individual points
3. Click to delete the currently selected ROI

Note that it often faster to delete the whole ROI and redefine it.


## 7.4 Reports

VaxALPR is able to output all plate reads in real time using a variety of standard protocols so that the plate reads can be accepted remotely by a variety of programs including Vaxtor's powerful Back Office – Helix, which can accept and store plate reads in real time from hundreds of i-PRO cameras.

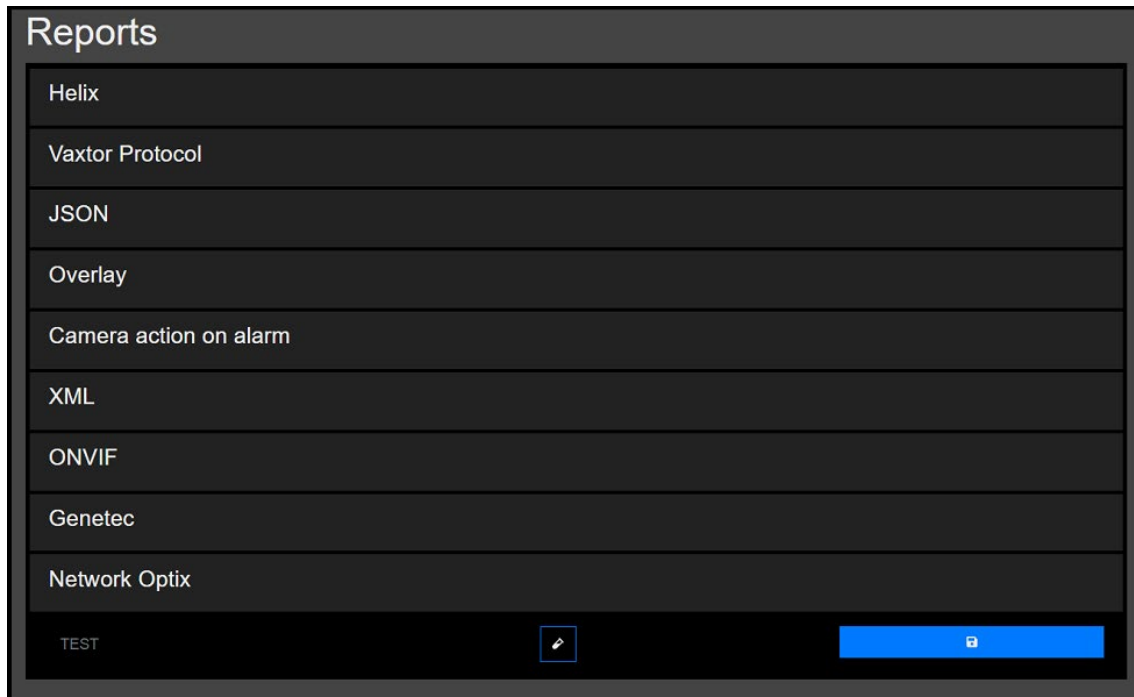


By selecting one of the listed protocols, a sub-menu will appear with fields for setting up parameters such as remote IP addresses etc.

### 7.4.1 Helix

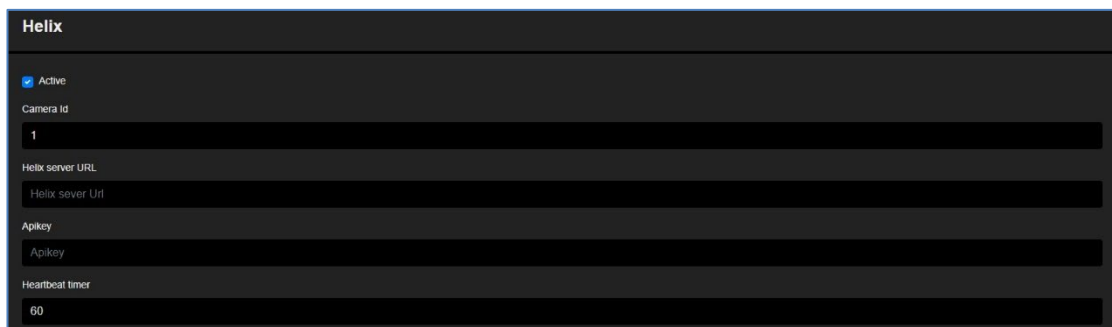

1. Active: Select to activate Helix Reporting
2. Camera Id: Enter the Camera ID as defined on Helix
3. Helix server URL: Enter the IP address (URL) of the receiving PC
4. Apikey: Enter the APIKEY with the required permission levels
5. Heartbeat timer (seconds): Set this to send heartbeat and diagnostic information to Helix

### 7.4.2 JSON

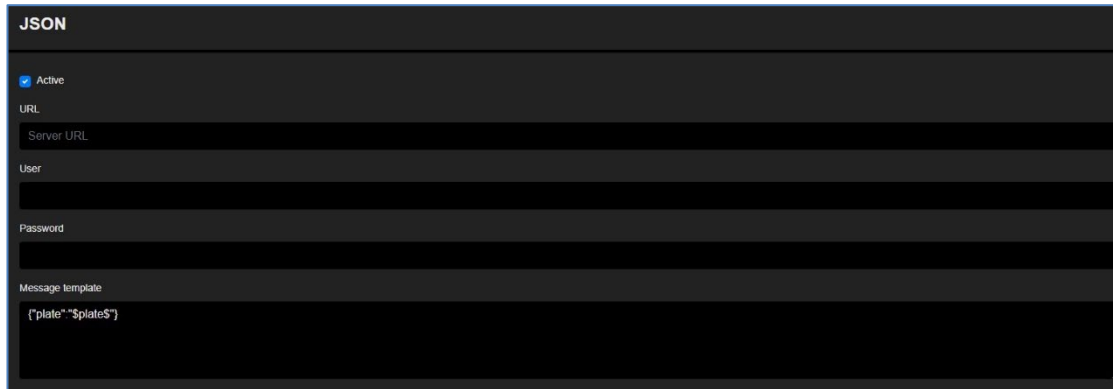


The screenshot shows a configuration window titled "JSON". It contains the following fields:

- Active
- URL: Server URL
- User
- Password
- Message template: {"plate": "\$plate\$"}

1. Active: Select to activate JSON Reporting
2. Server URL: Enter the IP address (URL) of the receiving PC
3. User / Password: Set if needed on a receiving HTTPS server
4. Message template: Enter the required message template

### 7.4.3 Overlay

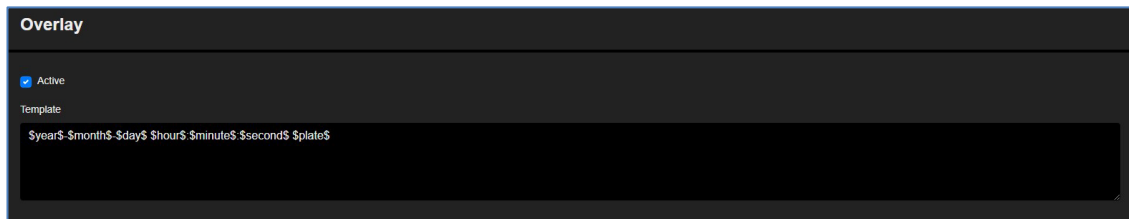


The screenshot shows a configuration window titled "Overlay". It contains the following fields:

- Active
- Template: \$year\$ \$month\$ \$day\$ \$hour\$ \$minute\$ \$second\$ \$plate\$

1. Active: Select to activate watermarking. This overlays user defined text onto the saved images.
2. Template: Define free-form text together with dynamic text (delineated by \$ ... \$) as shown.  
A complete list of reserved words is included at the end of this manual.



### 7.4.4 Camera action on alarm

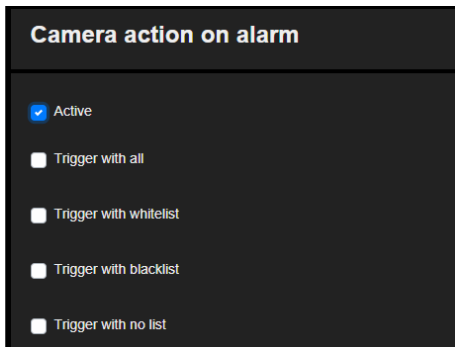

1. Active: Select to activate camera action alarm
2. Select trigger option

Camera firmware functions(ex. Alarm output terminal control) can be activated when selected trigger event occurs.

Please refer to camera's manual for configuration and details.

Alarm	VMD area	SCD area	Audio detection	Notification
<b>Alarm</b>				
Terminal 1	Off			
Terminal 2	Alarm output			
Terminal 3	Off			
VMD alarm	<a href="#">VMD &gt;&gt;</a>			
SCD alarm	<a href="#">SCD &gt;&gt;</a>			
Audio detection alarm	<a href="#">Audio detection &gt;&gt;</a>			
Command alarm	Command alarm	<input type="radio"/> On <input checked="" type="radio"/> Off		
	Reception port	<input type="text" value="518"/> (1-65535)		
Alarm deactivation time	<input type="text" value="5"/> s (0.5s, 1-600s)			
Alarm test	<input type="button" value="Execute"/>			
<b>Output terminal</b>				
Terminal output upon alarm detection	<input checked="" type="radio"/> On <input type="radio"/> Off			
SD memory card error	<input type="radio"/> On <input checked="" type="radio"/> Off			
Terminal state upon alarm detection	<input checked="" type="radio"/> Latch <input type="radio"/> Pulse			
Terminal action upon alarm detection	<input type="radio"/> Open <input checked="" type="radio"/> Close			
Pulse output width	<input type="text" value=""/> s (1-120s)			
<b>Camera action on alarm</b>				
Alarm E-mail notification	<a href="#">E-mail server &gt;&gt;</a>			
Alarm image FTP/SFTP transmission	<a href="#">FTP/SFTP setup &gt;&gt;</a>			
Alarm image recording(SD memory card)	<a href="#">SD memory card setup &gt;&gt;</a>			
TCP alarm notification	<a href="#">TCP alarm notification &gt;&gt;</a>			
HTTP alarm notification	<a href="#">HTTP alarm notification setup &gt;&gt;</a>			
SNMP transmission upon alarm detection	<a href="#">To SNMP setting</a>			

### 7.4.5 XML



3. Active: Select to activate XML Reporting
4. URL: Enter the IP address (URL) of the receiving PC
5. User / Password: Set if needed on a receiving server
6. Message template: Enter the required Message template

This method can be used to send plate reads to Milestone. [See Milestone chapter later in this manual.](#)

This reporting option will cause VaxALPR On Camera to send each plate event in an XML packet via an HTTP POST.

The target URL should be a 'well-formed' URL such as: <http://myserver.com/> or <https://myserver.com:port/destination/mypage.php>

For Milestone connections the URL should be: <http://milestoneserver:9090/>

Both domain names or IP address can be used.

Modify the message as needed. By default, the message is a valid Analytic Event for Milestone. A copy of the XML schema file (.xsd) for Milestone is listed [here](#).


**NOTE: You can use dynamic text replacement to match the current plate's information:**

**See separate doc "Complete List of Dynamic Replacement Reserved Words" for the latest additions.**

- **\$image\$**: Full JPEG image encoded in base64.
- **\$jpegsize\$**: JPEG size in bytes.
- **\$date\$**: Timestamp in ISO8601 format
- **\$plate\$**: Plate number
- **Etc.....**

#### 7.4.6 ONVIF

ONVIF camera protocol is used to send data to i-PRO's VMS software, 'Video Insight' or 'i-PRO Active Guard'.

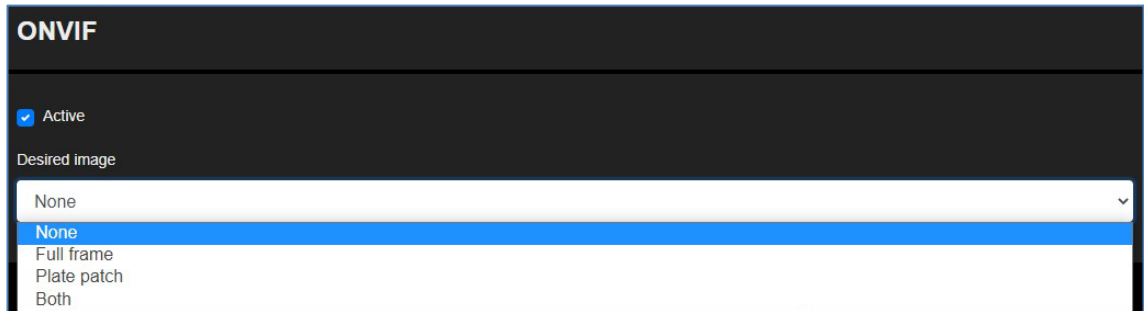

**ONVIF**

Active

Desired image

None

Full frame

Plate patch


Both

1. Active: Select to activate ONVIF Reporting
2. Desired Image: Select which images ( or combination) should be reported
3. Destination: Video Insight LPR plug-in or i-PRO Active Guard

#### 7.4.7 Genetec

This is for Genetec's Third Party ALPR Plugin. Please refer to another manual **Genetec's Third Party ALPR Plugin Configuration Manual** and **Genetec™ Third-Party ALPR Plugin Guide 5.10.0**

<https://www.vaxtor.com/support/knowledge-base/>

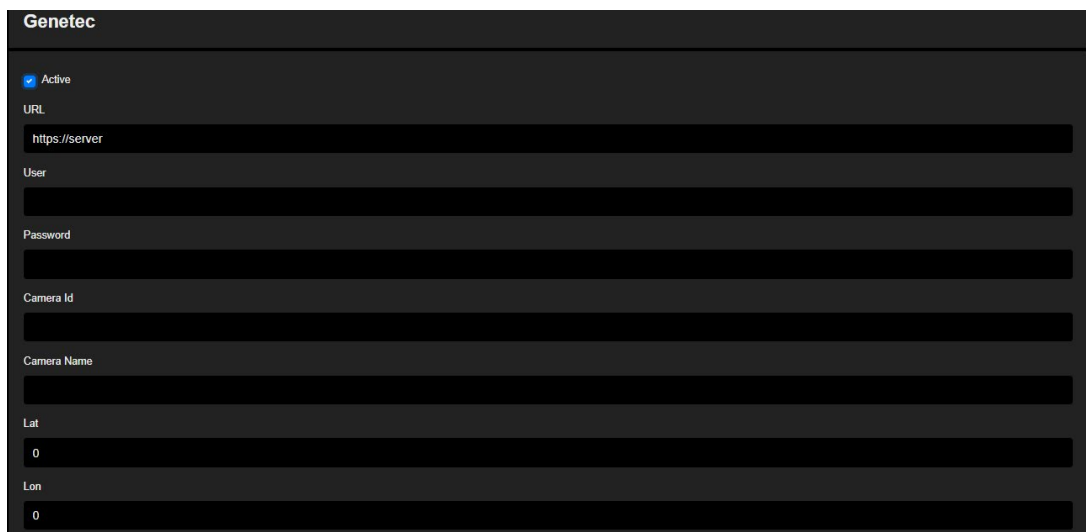

**Genetec**

Active

URL

https://server

User

Password

Camera Id

Camera Name

Lat

0

Lon


0

#### 7.4.8 Network Optix

This is for Network Optix VMS. Please refer to this page how to configure.

[https://i-pro.com/products\\_and\\_solutions/en/surveillance/partners/video-management-partner/vms-tips/vaxtor\\_lpr\\_for\\_nx](https://i-pro.com/products_and_solutions/en/surveillance/partners/video-management-partner/vms-tips/vaxtor_lpr_for_nx)

#### 7.4.9 Test Plate




1. Plate number to test: Enter the test plate number



2. Submit Reporting: Select to send the test plate to all configured reporting options  
You can then check the Log file for and transmission problems.

#### 7.4.10 Save all Reporting Options

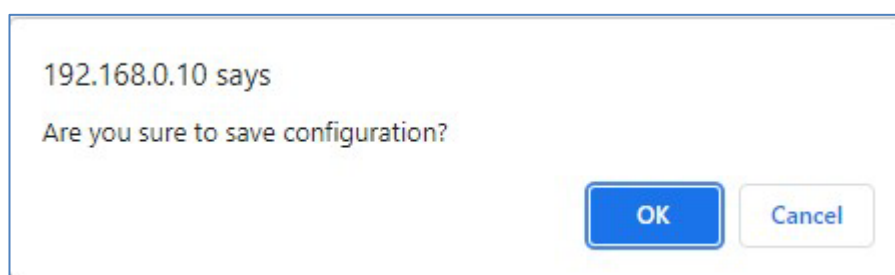











After configuring and testing all reporting options, remember to save them to the camera's memory. Select the blue disk icon – bottom right.



## 7.5 Database

Database Plates

1 2 1 of 500

Capture	Image	Plate	Country	Direction	Make	Model	Color
14/01/2022, 11:28:39		1553G6	TWN	Getting closer			
14/01/2022, 11:28:36		AKM221S	TWN	Unknown			
14/01/2022, 11:28:26		ANU9768	TWN	Getting closer			
14/01/2022, 11:28:09		2738YS	TWN	Getting closer			7
14/01/2022, 11:28:04		TAM917	TWN	Getting closer			
14/01/2022, 11:28:01		5336YK	TWN	Getting closer			
14/01/2022, 11:27:58		AKG2668	TWN	Getting closer			
14/01/2022, 11:27:57		585N7	TWN	Getting closer			
14/01/2022, 11:27:47		9317D1	TWN	Getting closer			
14/01/2022, 11:27:43		AGD0291	TWN	Getting closer			

3 4 5 10000 plates 6 CSV

The program will store up to 10,000 plate reads in a local database on the camera. Once this limit is reached, new plate reads will replace the oldest ones.


The Database screen comprises:

- (1) Search and Load area
- (2) Page display control
- (3) Column Configuration
- (4) Play / Pause updating the database with new reads
- (5) Total items stored
- (6) CSV download
- (7) Main plate list

### Plate details

To show item details, click on a plate record, a new window appears with the vehicle details:


Plate details



Capture	14/01/2022, 11:26:43
Plate	7581J7
Country	TWN
Direction	Getting closer
Make	
Model	
Color	

Close

Use the green **Settings** icon, bottom right, to control what information is displayed when you select a plate. i.e. a list of the available stored fields:

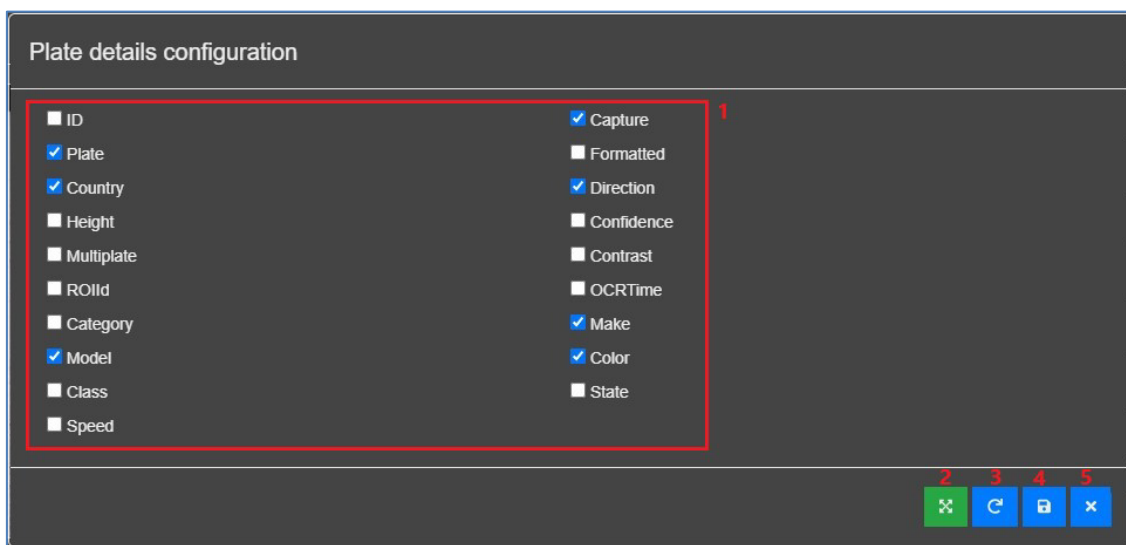


When setting up a system the most useful to display include the Height (average character height), OCR (processing time), Confidence, Multiplate (how many reads were processed) etc.

1. This area is where you can control which fields are displayed when you click on a plate
2. Selecting this icon enables ALL the fields
3. This resets the fields displayed to their default settings
4. Select the disk icon to save your current display settings
5. Select the X icon to close the menu and return to the main plates screen

### Page Display Control


If there are more than 20 stored plate reads, the camera will paginate the results.

Use the Page Control box to navigate through the pages




Use the < and > icons to scroll 20 plates at a time.

### Load Plates

1. To load all the detected plates stored in camera, click the  reload button  
 This will refresh the list with the latest captures.


### Download the Plate list

You can download the current Plate list by clicking on the CSV button:




The resulting .csv file will be saved in your downloads folder.

**NOTE:** In this example only 8 items were in the search list which were then downloaded successfully. if you need to download the full database, then this must be downloaded page by page, 100 records at a time.


Do this by Pausing the live reads  and then selecting each page in turn and downloading.





If you need to see all of the camera reads then it is recommended that you send all the plate reads as they happen to a back office such as Helix. The program contains many reporting protocols and methods, - see the Reporting section.

### Column Configuration

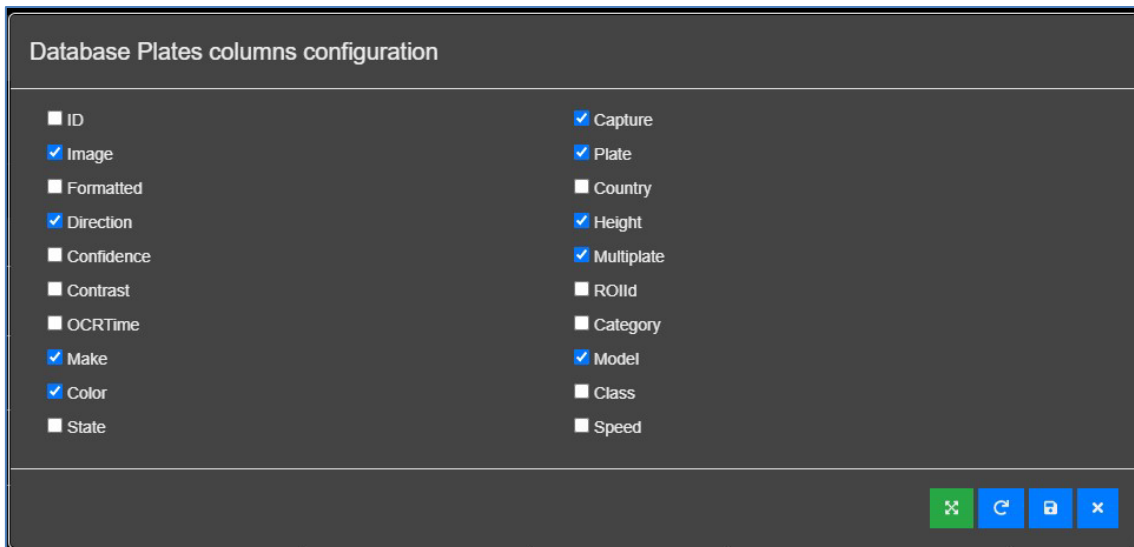


This works in exactly the same way as plate details configuration. Select what columns should be displayed and save your settings. The new columns will be displayed:

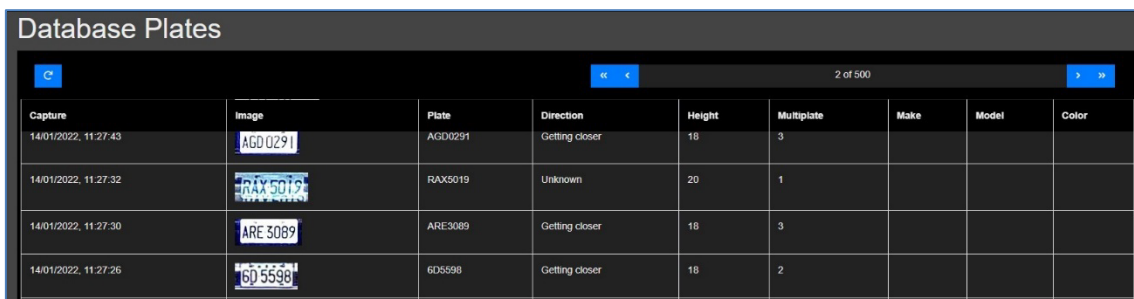

Capture	Image	Plate	Direction	Height	Multiplate	Make	Model	Color
14/01/2022, 11:27:43		AGD0291	Getting closer	18	3			
14/01/2022, 11:27:32		RAX5019	Unknown	20	1			
14/01/2022, 11:27:30		ARE3089	Getting closer	18	3			
14/01/2022, 11:27:26		6D5598	Getting closer	18	2			

## 7.6 Log file

Clicking this displays the Log file showing the programs activity.

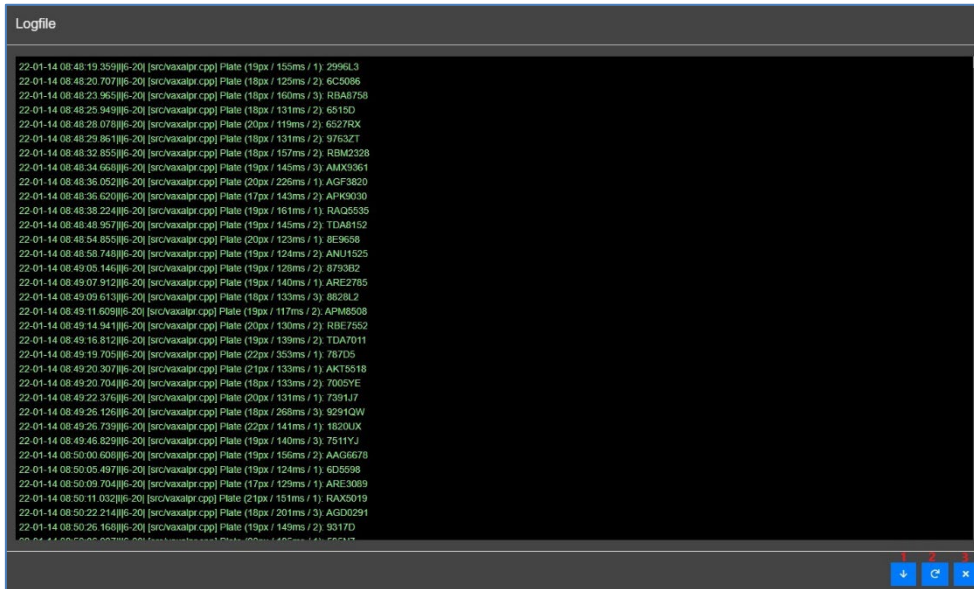

1. Bottom: Select to move to the bottom of the logfile (most recent)
2. Refresh: Select to refresh the view of the logfile
3. Close: Select to close the logfile

## 7.7 Upload Config

Select and browse to a previously exported configuration file to import all settings.

## 7.8 Download Config

Selecting will create and download the current configuration file in .json format



## 8. Sending data to Milestone

Use the XML reporting option to send plate reads to Milestone. This will send each plate event in an XML packet via an HTTP POST.

The target URL should be a something like: <http://milestoneserver:9090/>

*Both domain names or IP address can be used. Modify the message as needed. By default, the message is a valid Analytic Event for Milestone.*

The Milestone XML Schema should be:

```
<?xml version="1.0" encoding="utf-8"?>
<AnalyticsEvent xmlns:i="http://www.w3.org/2001/XMLSchema-instance" xmlns="urn:milestone-systems">
  <EventHeader>
    <ID>00000000-0000-0000-0000-000000000000</ID>
    <Timestamp>$date$</Timestamp>
    <Type>License Plate Recognition</Type>
    <Message>VaxALPR On Camera Event</Message>
    <CustomTag>$plate$</CustomTag>
    <Source>
      <Name>INSERT THE CAMERA'S IP ADDRESS</Name>
    </Source>
  </EventHeader>
  <Description>$plate$</Description>
  <ObjectList>
    <Object>
      <Name>Plate</Name>
      <Confidence>$confidence$</Confidence>
      <Value>$plate$</Value>
      <AlarmTrigger>true</AlarmTrigger>
      <Size>$charheight$</Size>
      <BoundingBox>
        <Top>$absolutetop$</Top>
        <Left>$absoluteleft$</Left>
        <Bottom>$absolutebottom$</Bottom>
        <Right>$absoluteright$</Right>
      </BoundingBox>
    </Object>
  </ObjectList>
  <SnapshotList>
    <Snapshot>
      <TimeOffset>0</TimeOffset>
      <Width>$width$</Width>
      <Height>$height$</Height>
      <SizeInBytes>$imagesize$</SizeInBytes>
      <Image>$image$</Image>
    </Snapshot>
  </SnapshotList>
  <Vendor>
    <Name>Vaxtor Technologies</Name>
  </Vendor>
</AnalyticsEvent>
```

The URL for the milestone event server is (by default):

<http://192.168.0.182:9090/>

Replace this with the IP address of your server

## 9. Troubleshooting

Many license plate reading issues are caused due to:

- Incorrect positioning of the camera
- Incorrect camera lens (or zoom setting)
- Insufficient illumination
- Incorrect camera settings - e.g. shutter speed
- Incorrect settings of the ALPR App.

In this section, we will study the most common of these issues and how to fix them.

### 9.1 The VaxALPR On-Camera software starts and then stops suddenly.

**Solution:**

Check that you have uploaded the license key and check that the date and time is set correctly.

### 9.2 The VaxALPR On-Camera license is valid but a 'Check license' message appears.

**Solution:**

Check that the date and time is set correctly.

### 9.3 The VaxALPR On-Camera software is running but not reading plates.

**Solution:**

Check if you can see the license plate in the image and that the image is of good quality, not under or over exposed. As a rule, if you can't easily read the plates then the software won't be able to read them either!

Image is everything so first try to adjust the camera lens to zoom in or out. Failing that, check if the camera itself can be repositioned closer or further from the reading point. The captured image should show the complete vehicle. This however depends on the resolution that the camera has been set to.

If the video quality looks good, then go to the camera's settings and ensure that the shutter speed is set high enough. (See earlier in this manual for a guide to shutter speeds)

If you CAN see the license plate clearly in the image and the software is not reading anything, try changing following parameters in the settings section of the App to be more tolerant:


1. In the Country options, do not select the **Grammar Strict** checkbox.
2. In the Video options, change the **Minimum Character Height** to 14 pixels.
3. In the Video options, change the **Maximum Character Height** to 60 pixels.
4. In the OCR options, change the **Minimum Global Confidence** to 50.

5. In the OCR options, change the **Minimum Character Confidence** to 25.
6. In the Region of Interest section, delete any existing **Region of Interests (ROIs)**.

Once you can see the license plate image and the software is now reading, change these settings back one by one.

## 9.4 Examples of incorrect camera setup


The camera is zoomed out too much and the plates are too small to be read properly. The angle is also too acute for an accurate read:

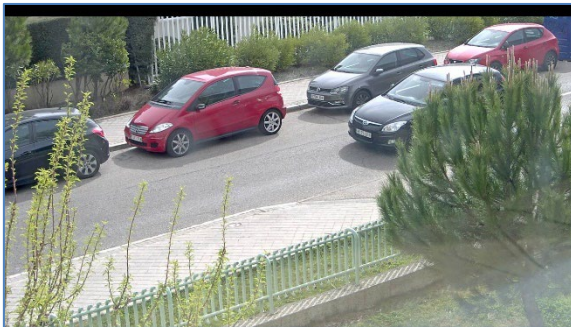

The camera is zoomed in too much and the plates are too big to be read:



The license plates appear over exposed:

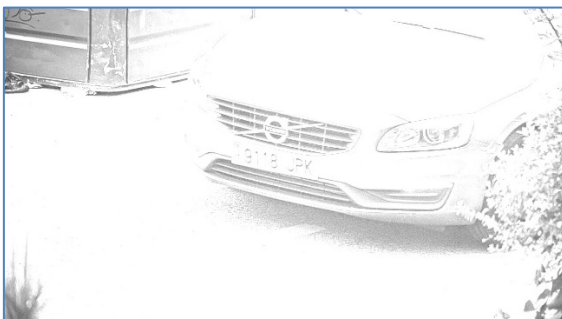

**Solution:**

Adjust the exposure in the camera, possibly by decreasing the shutter speed ( e.g. to 1/2000<sup>th</sup> sec). If this is a night-time shot, try reducing the IR illumination

**The license plates appear blurred:****Solution:**

Try adjusting the focus or shutter speed of the camera.

**The license plate image appears distorted or at an acute angle:****Solution:**

Try adjusting the position of the camera to make the plates more level and all angles less severe.

**The plate image appears unequally lit or contains shadows:****Solution:**

Avoid placing the camera where it can encounter direct sunlight or reflections. Shadows in the image can decrease the recognition accuracy.

**The plate images are of low contrast at night:**



**Solution:**

Try improving low lighting conditions and always use a good IR illuminator.

### **9.5 JSON or TCP setup but no plates being received**

**Solution**

If you are using a remote URL to receive the data, check that a DNS server has been selected in the main i-PRO setup.

### **9.6 Licencing Error -78**

You have re-installed a previously used software license

### **9.7 Licensing Error -64**

You have installed a software license that was allocated top another i-PRO camera

## 10. Dynamic Text Replacement Reserved Words

- "\$datehour\$" YYYY-MM-DD HH:MM:SS.mmm
- "\$year\$" year
- "\$month\$" month
- "\$day\$" day
- "\$hour\$" hour
- "\$minute\$" minute
- "\$second\$" second
- "\$uuid\$" unique ID
- "\$plate\$" plate ASCII
- "\$code\$" plate ASCII
- "\$multiplate\$" multiplate rate
- "\$plateutf8\$" plate UTF8
- "\$state\$" state
- "\$category\$" category
- "\$roid\$" roi ID
- "\$direction\$" direction
- "\$whitelist\$" whitelist description
- "\$blacklist\$" blacklist description
- "\$date\$" date
- "\$utcdate\$" UTC date
- "\$timestamp\$" timestamp
- "\$processingtime\$" processing time
- "\$charheight\$" char height
- "\$left\$" left of the plate
- "\$top\$" top of the plate
- "\$right\$" right of the plate
- "\$bottom\$" bottom of the plate
- "\$absoluteleft\$" left of the plate with precision
- "\$absolutetop\$" top of the plate with precision
- "\$absoluteright\$" right of the plate with precision
- "\$absolutebottom\$" bottom of the plate with precision
- "\$country\$" country name
- "\$countrycode\$" 3 letters country
- "\$countrycode2\$" until 2 letters country
- "\$confidence\$" plate confidence
- "\$confidenceprecision\$" plate confidence with 2 decimals
- "\$width\$" image width
- "\$height\$" image height
- "\$imagesize\$" image size
- "\$plateimagesize\$" plate image size

- "\$signalid\$" signal ID
- "\$make\$" vehicle make
- "\$model\$" vehicle model
- "\$color\$" vehicle color
- "\$class\$" vehicle class
- "\$stx\$" Start transmission character (02)
- "\$etx\$" End transmission character (03)
- "\$formatted\$" plate utf8 formatted
- "\$plateimage\$" plate image base 64 encode
- "\$image\$" image base 64 encode
- "\$tag\$" 24-bit hash of the plate number ascii
- "\$mac\$" mac address
- "\$signaled\$" "true" or "false"
- "\$sensorid\$" sensor ID
- "\$patchwidth\$" patch image width
- "\$patchheight\$" patch image height

#### Conditionals

"\$ifwhitelist\$" If the plate is on the whitelist, the text in the 'if clause' will be displayed.

- "\$ifblacklist\$" If the plate is on the blacklist, the text in the 'if clause' will be displayed.
- "\$ifnotwhitelist\$" If the plate is not on the whitelist, the text in the 'if clause' will be displayed.
- "\$ifnotblacklist\$" If the plate is on not on the blacklist, the text in the 'if clause' will be displayed.
- "\$iflist\$" If the plate is on a list, the text in the 'if clause' will be displayed.
- "\$nolist\$" If the plate is not on a list, the text in the 'if clause' will be displayed.

example: \$ifblacklist\$blacklist\$ifblacklist\$\$ifwhitelist\$whitelist\$ifwhitelist\$\$ifnolist\$not in list\$ifnolist\$



## 10.1 Note on UTC time format:

Time UTC: 2021-04-13T00:50:15.000Z  
( YYYY-MM-DDTHH:MM:SS.mmmZ - The last Z indicates the time is UTC)

Local Time: 2021-04-13T00:50:15.000-03:00  
( YYYY-MM-DDTHH:MM:SS.mmm±hh:mm - Where the last ±hhmm is the difference from UTC time )

Ends.